

# powermonkey classic



### **Each kit contains:**

- 1 x powermonkey classic charging unit
- 1 x Universal mains charger which will work in over 150 countries and has interchangeable heads for UK, US/Japan/China, Australia and Furone
- 1 x Retractable USB charging cable
- Nokia & Mini Nokia, Samsung G600, LG Chocolate and Sony Ericsson wide connectors
- 1 x mini USB for Motorola RAZR V series, BlackBerrys and Bluetooth headsets
- 1 x Micro USB for the latest Motorola and Nokia series
  1 x Female USB charging tip for
- 1 x Female USB charging tip for smart phones, PDAs and other USB powered devices
- 1 x iPod tip
- 1 x DC4.0 connector for Sony PSP and specific digital cameras

# Worldwide power solutions for technology that travels

powermonkey classic is the essential travel companion providing portable power for your gadgets when you need it most.

Imagine you're on an important business trip and you've left your mobile phone charger at home, or trekking through Thailand about to take that life-defining picture and your camera dies... avoid nightmare scenarios like this with powermonkey classic's reserve power supply!

Small, agile and powerful, the revolutionary powermonkey classic can be left in your bag, car or desk and will be ready to provide you with emergency power when you need it most.

To keep the powermonkey classic at full strength just top up the supply with one of the included mains chargers and make sure you have power wherever you are in the world.

- Compatible with the majority of standard mobile phones including Nokia & Mini Nokia, Motorola, Samsung, Siemens & Sony Ericsson
- USB connector powers up iPods and accessories, MP3 players, PDAs, smart mobile phones, digital cameras, Bluetooth headsets and many more digital devices
- Small, lightweight design that fits in your pocket
- Re-usable reserve power pack no batteries required
- Includes mains travel charger for use in 150 countries 110v to 240v

### Instructions to charge device:

- 1. Switch powermonkey classic on
- 2. Green LED will flash (if red light displays, powermonkey classic needs to be recharged)
- 3. Connect to device requiring charging
- When device is fully charged, remove powermonkey classic
- Switch powermonkey classic off when not in use to conserve power

# To recharge powermonkey classic

- Ensure unit is switched off
- 2. Connect to mains charger
- 3. LED will turn red
- 4. When fully charged, LED will turn green
- 5. Remove from mains charger

### Maximum reserve power available:

All iPods – 40 hours Mobile phones – 96 hours Digital cameras – 1600 pictures Two-way radios – 24 hours PSPs – 5 hours MP3/MP4s – 6 hours PDAs – 48 hours

## Specifications:

Capacity: 2200mAh
Input Interface: DC3.5 x 1.1
Input Voltage: 5v 500mA
Output Interface: D3.5 x 1.1
Output Voltage: 4.5~5.5v
Output Max Current: 1.2A

Colour available: silver, black, pink, blue or purple

Weight: 70g

Dimensions: 88x39x37mm







For customer support please email: support@powertraveller.com



Powertraveller Limited 8 Delta Park, Wilsom Road Alton, Hampshire GU34 2RQ UK

Tel: +44 (0)1420 542980 info@powertraveller.com



be supporting the David
Shepherd Wildlife Foundation
- saving critically endangered
mammals in the wild.