

# Přenosný Smoothie maker




# MULTIFUNKČNÍ PŘENOSNÝ MINI MIXÉR

## Návod k použití

1. Tento výrobek je vybaven stejnosměrným motorem poháněným baterií. Nabíječka je vhodná pro všechny typy nabíječek. Před použitím výrobek nabijte pomocí kabelu dodaného společností. Doba nabíjení je 3 hodiny.
2. Když je výrobek v provozu, je přísně zakázáno odšroubovávat a vkládat ruce nebo jiné tvrdé předměty do těla šálku, aby se předešlo nehodám.
3. Při čištění výrobku se před čištěním těla šálku a podstavce ujistěte, že je napájení vypnuté. Při čištění neponořujte podstavec do vody, aby nedošlo k vniknutí vody do podstavce a poškození elektronických součástí.
4. Je zakázáno nechávat výrobek běžet naprázdno. Maximální doba stlačení je 45 sekund. Při provozu po dobu 45 sekund přestane modrá kontrolka automaticky blikat. Resetujte spínač a znovu jej spusťte. Neustále nevymačkávejte šťávu nadměrnou silou, aby nedošlo k ohrožení životnosti výrobku v důsledku nadměrného zatížení a zahřátí elektronických součástí.
5. Při běžném používání se motor náhle zastaví v důsledku nadměrného používání. V tomto okamžiku se motor zastaví, aktivuje se program ochrany vedení, napájení se automaticky přeruší a LED bliká červeně. Po odpojení spínače přestane LED blikat, stisknete spínač a provoz se vrátí do normálního režimu.
6. Nevkládejte části tohoto výrobku do myčky nádobí ani do jiných čistících zařízení.
7. K čištění výrobku nepoužívejte ocelovou vlnu, abrazivní čistící prostředky ani žíravé kapaliny.
8. Tento výrobek je speciální stroj na čerstvé šťávy, není vhodný na mletí masa. Nemůže přímo mlít ořechy nebo fazole. Přímé mletí může způsobit poruchu výrobku a zkrátit jeho životnost.
9. Tento výrobek musí být uložen na místě, které není snadno přístupné dětem. Nedovolte, aby tento výrobek používaly nebo si s ním hrály osoby (včetně dětí) s nedostatečnými zkušenostmi a znalostmi.
10. Tento výrobek se používá pro osobní nebo rodinné použití. Pokud je třeba během používání opravit nekontrolovatelné závady, obraťte se na zákaznický servis výrobce. Pokud dojde k poškození elektronických součástí v důsledku samovolné demontáže, společnost nenese odpovědnost za údržbu. Před prvním použitím výrobku se ujistěte, že je baterie plně nabitá, a důkladně očistěte všechny části, které přicházejí do styku s potravinami. Tento výrobek je vybaven dvojitou bezpečnostní ochranou. Bude fungovat pouze po upevnění těla šálku k základně.
1. Je zakázáno používat výrobek při volnoběhu. Před použitím odstraňte z víčka šálku vytečený sáček čaje, utáhněte tělo šálku a víčko, nalijte do šálku vodu, spusťte spínač.
2. Ovoce a zeleninu před použitím nakrájejte na malé kousky. Obecně přidávejte mléko, jogurt, převařenou vodu a další tekutiny. Voda slouží k promazání nože, který může vést krájené potraviny.
3. Před spuštěním nezapomeňte stroj otočit dnem vzhůru. Nechte nůž nějakou dobu na vzduchu a zatřeste s ním pod úhlem 45 stupňů.
4. Pokud se šťáva nedostane, otočte ji vzhůru nohama a znovu ji spusťte.

**Distributor**  
Sunnysoft s.r.o.  
Kovanecká 2390/1a  
190 00 Praha 9  
Česká republika  
[www.sunnysoft.cz](http://www.sunnysoft.cz)

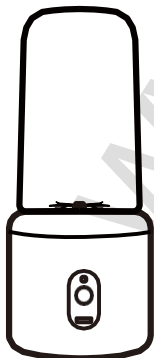

| Fenomén poruchy                                                          | Analýza příčin                                    | Rozlišení                                                         |
|--------------------------------------------------------------------------|---------------------------------------------------|-------------------------------------------------------------------|
| 1. Zařízení nelze spustit, blikají červené a modré kontrolky.            | Tělo a základna nejsou dotažené                   | Vyrovnejte pouzdro s utažením základny.                           |
| 2. Nelze nastartovat nebo při používání svítí červená kontrolka vypnutí. | Nedostatečný výkon                                | Nabíjení včas                                                     |
| 3. Vypnete modré světlo blikající během používání                        | Ochrana proti vypnutí po dobu 45 sekund           | Restartování                                                      |
| 4. Vypnutí během používání. Červená kontrolka bliká                      | Jídlo je tvrdé                                    | Přidejte tekutinu do potraviny a protřepte šálkem, aby se zapnul. |
| 5. Únik vody                                                             | Silikonový kroužek není nasazen ve správné poloze | Opětovná instalace silikonového kroužku                           |

# Portable Electric Juice Cup




# EN MULTIFUNCTIONAL PORTABLE MINI BLENDER

## Instructions for use

1. This product has a battery-operated DC motor. The charger is suitable for all types of chargers. Before use, charge the product with the company-supplied cable. Charging time is 3 hours.
2. When the product is in operation, it is strictly forbidden to unscrew and insert hands or other hard objects into the body of the cup to avoid accidents.
3. When cleaning the product, before cleaning the cup body and base, make sure the power is switched off. Do not immerse the base in water for cleaning, to prevent water from entering the base and damaging the electronic components.
4. It is forbidden to keep the product idling. The maximum squeeze time is 45 seconds. When operating for 45 seconds, the blue light automatically stops flashing. Reset the switch and restart it. Do not continuously squeeze the juice with excessive force, so as not to jeopardise the life of the product due to excessive load and heating of the electronic components.
5. During normal use, the motor suddenly stops due to overuse. At this point, the motor is stopped, the line protection programme is activated, the power supply is automatically cut off and the LED flashes red. After disconnecting the switch, the LED stops flashing, press the switch and operation returns to normal.
6. Do not put parts of this product in the dishwasher or other cleaning equipment.
7. Do not use steel wool, abrasive cleaners, or corrosive liquids to clean the product.
8. This product is a special machine for fresh juices, not suitable for mincing meat. It cannot grind nuts or beans directly. Direct grinding may cause product failure and shorten its service life.
9. This product must be stored in a place that is not easily accessible to children. Do not let people (including children) with lack of experience and knowledge use or play with this product.
10. This product is used for personal or family use. If uncontrollable faults need to be repaired during use, please contact the manufacturer's customer service department. If electronic parts are damaged due to self-disassembly, the company will not be responsible for maintenance.

Before using the product for the first time, make sure the battery is fully charged and thoroughly clean any parts that come into contact with food materials. This product is equipped with a double safety protection. It will only work after the cup body has been secured to the base.

1. It is forbidden to use the product when idling. Before use, remove the leaking tea bag from the cup lid, tighten the cup body and lid, add water into the cup, start the switch.
2. Cut fruit and vegetables into small pieces before use. In general, add milk, yoghurt, boiled water and other liquids. The water is used to lubricate the blade, which can guide the food to be chopped.
3. Be sure to turn the machine upside down before starting it. Let the blade expose itself to the air for some time and shake it at a 45 degree angle.
4. If the juice fails, turn it upside down and restart it.

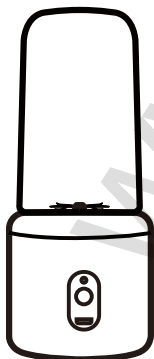

| Fault Phenomenon                                                    | Analysis of causes                                  | Resolution                                          |
|---------------------------------------------------------------------|-----------------------------------------------------|-----------------------------------------------------|
| 1. The device cannot be started, the red and blue lights flash      | Body and base are not tightened                     | Align the housing with the tightening of the base   |
| 2. Cannot start or when in use the red switch-off light is constant | Insufficient power                                  | Charge in time                                      |
| 3. Turn off the blue light flashing during use                      | Shutdown protection for 45 seconds                  | Restart                                             |
| 4. Shutdown during use. Red light flashes                           | The food is hard                                    | Add liquid to the food and shake the cup to turn on |
| 5. Water leakage                                                    | Silicone ring is not fitted in the correct position | Reinstall the silicone ring                         |