

■ Assembling




Typical




Extended

■ Connect the microphone to the phone

- 1.Mobile phones with the 3.5mm interface please connect the microphone as follow(pay attention to the line marks).



- 2.Mobile phones without the 3.5mm interface requires an adapter cable to connect to the microphone.

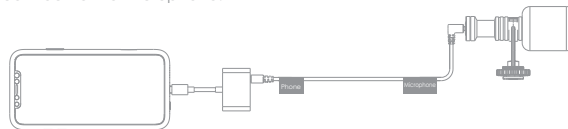

⚠ Note: Lighting adapter cable for iOS system and USB Type-C adapter cable for Android system are optional and can be purchased separately.

■ How to use the MOIN L1 fill light.

- 1.Click the button, and then the blue indicator light will flash. Wait for about 1 second until the blue indicator light is fully on;
- 2.Long press for 3 seconds to turn on the fill light;
- 3.After turning on the fill light, click the button to adjust the cold-tone brightness;
Double-click the button to adjust the warm-tone brightness;
- 4.Long press for 3 seconds to turn off the fill light.

⚠ Please read the user manual and install the APP for more operations for the fill light.

■ Video editing

You can download the VMaker App for video editing. Massive video templates and professional editing tools to enhance your video creation.



VMaker

■ Specifications:

Package Dimension: 252*210*85mm

Package Weight: 973g

Supported Phone Dimension: 56mm-84mm

	Tripod	Extension Pole	Phone Holder	Light	Microphone
Material	Plastic	Aluminum	Aluminum	Plastic	Aluminum
Weight(g)	79	155	130	74	50
Diameter(mm)	Φ35*131	Φ27*190-720 (max)	120*120*30	40*40*40	Φ22*81

■ Specifications for accessories:

MOIN L1:

Color Temperature: 3200K-5600K

LUX: 1000LUX (0.5m)

Run Time: 2H

Battery: Li-ion battery 7.4V 800mAh 5.92Wh

Microphone:

Transducer: Electret Condenser

Polar pattern: Cardioid

Frequency Response: 35-18KHz +/-3dB

Sensitivity: -42dB +/- 1dB / 0dB=1V/Pa,1kHz

Signal to Noise Ratio: 76dB SPL

Plug: 3.5mm TRS and TRRS connector

■ Support



Website: www.gudsen.com
E-mail: support@gudsen.com